3. Disassembly and Reassembly

3-1 Removal of Button-C/Reel and Button-Switch

Detach the BUTTON with a flat head screw driver.

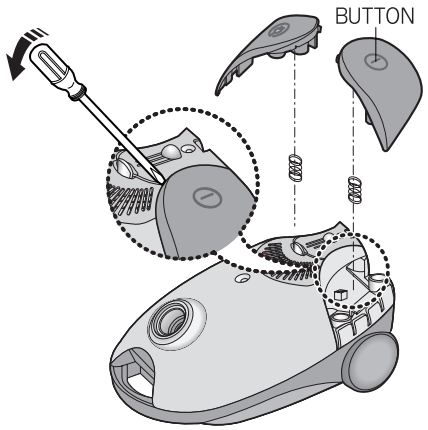

3-2 Removal of Panel - Control

Loosen the three screws and detach PANEL-CONTROL.

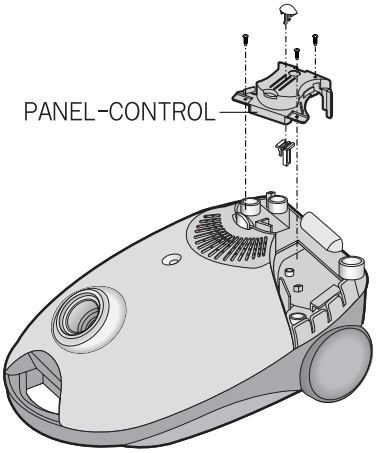

3-3 Disassembly of Cover-Dust ASS'Y

Loosen the one screw and detach the INDICATOR-ASS'Y.

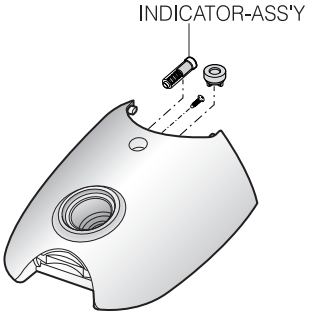

3-4 Disassembly of Main Body-Control/Removal of Main PCB Assembly

Loosen the four screws and grasp both sides of the BODY-CONTROL. Lift it upwards, Separate the WIRE ASS'Y from the PCB-MAIN ASS'Y.

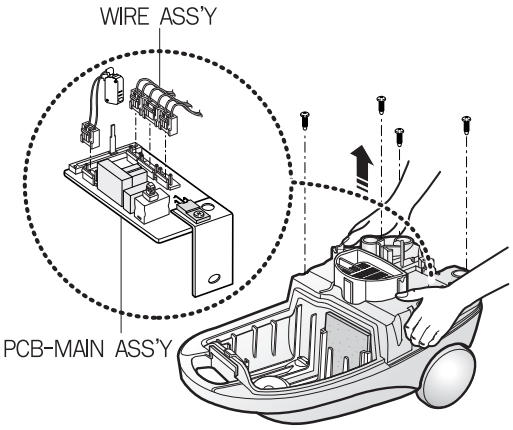

3-5 Motor Replacement

1. Loosen the two screws and separate COVER-MOTOR from the body.
2. Separate MOTOR and WIRE-HARNESS MOTOR.

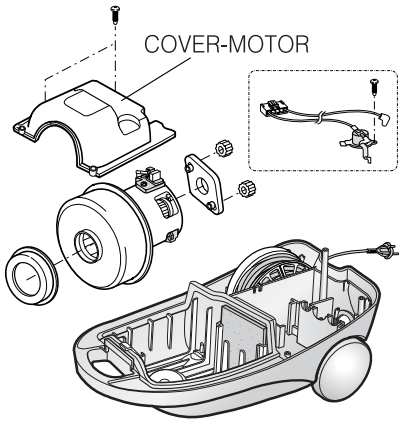

3-6 Cord-Reel Replacement

1. Disassemble the GUARD-CORD with a flat head driver. (Insert it into the gap and push the hook to the opposite side.)

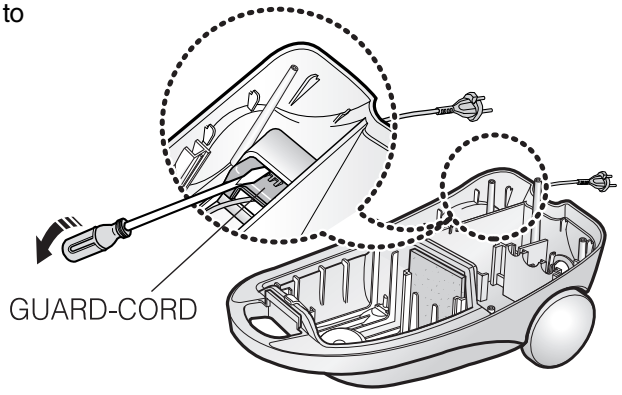

2. Separate the CORD-REEL from the main body.

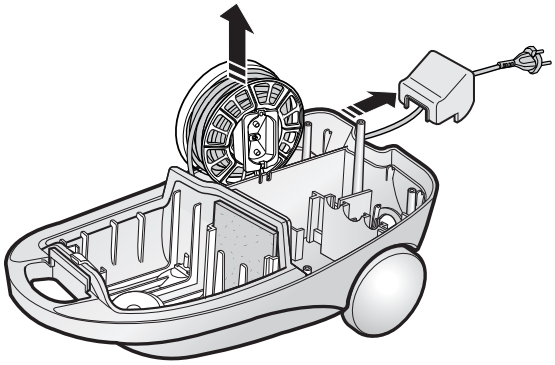

3. Hold the COVER-REEL, and wind the power cord to the left 4~5 times.

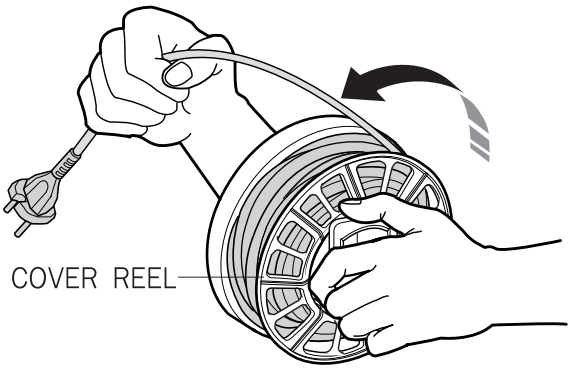
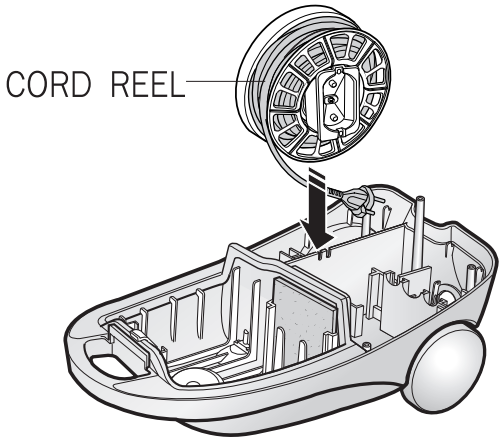
4. After winding, assemble the CORD-REEL to the body.